



NATIONAL INTERAGENCY INCIDENT COMMUNICATIONS DIVISION DPH KING RADIO QUICK PROGRAM GUIDE



1. Select a group and channel needed to program.

Select a group by pressing the " # " key followed by a 2-digit group number and press the " ENT " key.

2. Program Access

- Insert programming plug into radio side connector.
- Press and hold the master switch on plug.
- While pressing the master switch, press and hold the " FCN " key for about 3 secs.
- LCD should display " ---ID ". (Note: NIICD radio password is " 000000 ")
- Enter the **SIX-DIGIT** password and press the " ENT " key to enter program mode.
- If the correct password was entered, the LCD will display " ^{PRG} CH 00 ".

3. Programming a Channel (ANALOG ONLY)

Once in the Program Mode, press a 2-digit channel number to program with the keypad.

„PRG CH 01“Channel 01 Settings is currently selected.

„PRG CH 01N“Press # to toggle between Narrow/Wide Band and press the " FCN " key.

„PRG RX 170.47500“Press " CLR " and enter new **RX Frequency** and press the " ENT " key.

„PRG RX MODE-A“Change **RX Mode** with " PRI " key to " A " for Analog and press the " ENT " key.

„PRG RX CG 000.0“Press " CLR " and enter new **RX Code Guard** and press " ENT " key.

„PRG RX IDCG " NAC0659 "RX NAC, DIGITAL ONLY , press the " ENT " key to skip to next field.

„PRG RX ID SQL-NRM "Change " **Squelch** " with " PRI " key to " NRM " and press the " ENT " key.

„PRG TX 170.47500“Press " CLR " and enter new **TX Frequency** and press the " ENT " key.

„PRG TX MODE-A“Change **TX Mode** with " PRI " key to " A " for Analog and press the " ENT " key.

„PRG TX CG 103.5“Press " CLR " and enter new **TX Code Guard** and press the " ENT " key.

„PRG TX IDCG " NAC0659 "TX NAC, DIGITAL ONLY , press the " ENT " key to skip to next field.

„PRG ID TG00001 "Talk Group ID , DIGITAL ONLY , press the " ENT " key to skip to next field.

„PRG CHAN 1 "Channel Label, press " ENT " to bring up the first programming field (^{PRG} CH 01N).

4. Channel Programming is complete. At this point the user may select another channel to program or exit the program mode by cycling power to the radio.

DPH NIICD Version 3.1/March, 2010

DPH SETTINGS & OPTIONS

ADD Channel to Scan List

Select CH with CH knob and press the " ENT " key.
"SCN" will appear in upper display.

DELETE Channel from Scan List

Select CH with CH knob and press the " CLR " key.
"SCN" will be removed from the upper display.

Note: Scan must be disabled to add/delete CH's from scan list.

ADD PRI Scan Channel

Select CH, Press " PRI " key, PRI will appear in display.

Priority Mode B, C or D must be enabled to change PRI Channel via the keypad.

Note: See DPH Help Files for more information.

Changing Groups: (See Step 1 on Front Page)

HI/LOW Power Selection

Select **LO Power** by toggling the LO/HI Switch to the up position. (*Toward the back of the radio*)

Select **HI Power** by toggling the LO/HI Switch to the down position. (*Toward the front of the radio*)

TX User Selectable Tones

To **Enable Tone** , press number on keypad to select.

To **Disable Tone** , press the number " 0 " on keypad.

Note: NIICD Radios TX User Tones are Disabled.

Disable/Enable Keypad

To **Disable** , press and hold " FCN " key.

To **Enable** , press and hold " FCN " key.

DPH CH 00 Program Guide

"P000000" Group Password Assignment
"0000000" Group ANI/DTMF ID
"120 SEC" Transmit Time-Out Timer
"2.0SEC" Scan Delay Time
"PRI OFF"Priority 1 Channel Assignment
"PR2 OFF"Priority 2 Channel Assignment

Group 1: (NIICD Default is 1-12345)

Battery Saver Disabled.....1- 12345
Group Scan.....1-1 2345
TX ON PRI 1.....1-12 345
Priority Key Lockout.....1-123 45
Scan List Lockout.....1-1234 5

Group 2: (NIICD Default is 2-12 345)

User Code Guard Enabled.....2- 12345
Busy Channel Indicator Enabled.....2-12 345
Busy Channel Lockout Enabled.....2-1 2345
Busy Channel Lockout/Override.....2-1 2345
ANI Enabled.....2-123 45
Manual DTMF Encoder.....2-1234 5
Manual DTMF/ANI Encoder.....2-123 45

Group 3: (NIICD Default is 3-12345)

Reserved.....3- 12345
Reserved.....3-1 2345
LCD Backlight ON Display Change.....3-1 2345
LCD Backlight ON Key Press.....3-123 45
Alphanumeric Mode Enabled.....3-1234 5
"LITE OFF"Back Light Duration
"GROUP XX"Group Label

Bold= Flashing



NATIONAL INTERAGENCY INCIDENT COMMUNICATIONS DIVISION DPH KING RADIO QUICK PROGRAM GUIDE



1. Select a group and channel needed to program.

Select a group by pressing the " # " key followed by a 2-digit group number and press the " ENT " key.

2. Program Access

- Insert programming plug into radio side connector.
- Press and hold the master switch on plug.
- While pressing the master switch, press and hold the " FCN " key for about 3 secs.
- LCD should display " ---ID ". (Note: NIICD radio password is " 000000 ")
- Enter the **SIX-DIGIT** password and press the " ENT " key to enter program mode.
- If the correct password was entered, the LCD will display " ^{PRG} CH 00 ".

3. Programming a Channel (ANALOG ONLY)

Once in the Program Mode, press a 2-digit channel number to program with the keypad.

„PRG CH 01“Channel 01 Settings is currently selected.

„PRG CH 01N“Press # to toggle between Narrow/Wide Band and press the " FCN " key.

„PRG RX 170.47500“Press " CLR " and enter new **RX Frequency** and press the " ENT " key.

„PRG RX MODE-A“Change **RX Mode** with " PRI " key to " A " for Analog and press the " ENT " key.

„PRG RX CG 000.0“Press " CLR " and enter new **RX Code Guard** and press " ENT " key.

„PRG RX IDCG " NAC0659 "RX NAC, DIGITAL ONLY , press the " ENT " key to skip to next field.

„PRG RX ID SQL-NRM "Change " **Squelch** " with " PRI " key to " NRM " and press the " ENT " key.

„PRG TX 170.47500“Press " CLR " and enter new **TX Frequency** and press the " ENT " key.

„PRG TX MODE-A“Change **TX Mode** with " PRI " key to " A " for Analog and press the " ENT " key.

„PRG TX CG 103.5“Press " CLR " and enter new **TX Code Guard** and press the " ENT " key.

„PRG TX IDCG " NAC0659 "TX NAC, DIGITAL ONLY , press the " ENT " key to skip to next field.

„PRG ID TG00001 "Talk Group ID , DIGITAL ONLY , press the " ENT " key to skip to next field.

„PRG CHAN 1 "Channel Label, press " ENT " to bring up the first programming field (^{PRG} CH 01N).

4. Channel Programming is complete. At this point the user may select another channel to program or exit the program mode by cycling power to the radio.

DPH NIICD Version 3.1/March, 2010

DPH SETTINGS & OPTIONS

ADD Channel to Scan List

Select CH with CH knob and press the " ENT " key.
"SCN" will appear in upper display.

DELETE Channel from Scan List

Select CH with CH knob and press the " CLR " key.
"SCN" will be removed from the upper display.

Note: Scan must be disabled to add/delete CH's from scan list.

ADD PRI Scan Channel

Select CH, Press " PRI " key, PRI will appear in display.

Priority Mode B, C or D must be enabled to change PRI Channel via the keypad.

Note: See DPH Help Files for more information.

Changing Groups: (See Step 1 on Front Page)

HI/LOW Power Selection

Select **LO Power** by toggling the LO/HI Switch to the up position. (*Toward the back of the radio*)

Select **HI Power** by toggling the LO/HI Switch to the down position. (*Toward the front of the radio*)

TX User Selectable Tones

To **Enable Tone** , press number on keypad to select.

To **Disable Tone** , press the number " 0 " on keypad.

Note: NIICD Radios TX User Tones are Disabled.

Disable/Enable Keypad

To **Disable** , press and hold " FCN " key.

To **Enable** , press and hold " FCN " key.

DPH CH 00 Program Guide

"P000000" Group Password Assignment
"0000000" Group ANI/DTMF ID
"120 SEC" Transmit Time-Out Timer
"2.0SEC" Scan Delay Time
"PRI OFF"Priority 1 Channel Assignment
"PR2 OFF"Priority 2 Channel Assignment

Group 1: (NIICD Default is 1-12345)

Battery Saver Disabled.....1- 12345
Group Scan.....1-1 2345
TX ON PRI 1.....1-12 345
Priority Key Lockout.....1-123 45
Scan List Lockout.....1-1234 5

Group 2: (NIICD Default is 2-12 345)

User Code Guard Enabled.....2- 12345
Busy Channel Indicator Enabled.....2-12 345
Busy Channel Lockout Enabled.....2-1 2345
Busy Channel Lockout/Override.....2-1 2345
ANI Enabled.....2-123 45
Manual DTMF Encoder.....2-1234 5
Manual DTMF/ANI Encoder.....2-123 45

Group 3: (NIICD Default is 3-12345)

Reserved.....3- 12345
Reserved.....3-1 2345
LCD Backlight ON Display Change.....3-1 2345
LCD Backlight ON Key Press.....3-123 45
Alphanumeric Mode Enabled.....3-1234 5
"LITE OFF"Back Light Duration
"GROUP XX"Group Label

Bold= Flashing