



THALES 25 (RACAL) RADIO QUICK PROGRAMMING GUIDE

Version 2012



1. Select a group and channel needed to program.

2. Program Access

Press the "ENTER" key to bring up the Main Menu Screen.

Scroll up/down using the "O" and "◇" keys to select "PROGRM" and press "ENTER" key.

Enter a 6-Digit Password if requested and press "ENTER". (*NIFC Password is "000000"*)

3. Programming a Channel (ANALOG Only)

○ Scroll down to "CHANNEL" and press "ENTER" to start programming the channel parameters.

○ Scroll down to "TAG" and press "ENTER". Change the channel name using keypad and press "ENTER".

○ Scroll down to "MODE" and press "ENTER". Select "ANALOG" and press "ENTER".

○ Scroll down to "B/W" and press "ENTER". Select either "25Khz" or "12.5Khz" and press "ENTER".

Note: 25Khz= Wideband, 12.5Khz= Narrowband

○ Scroll down to "ENCRPT" and press "ENTER". Select "DISABD" and press "ENTER".

○ Scroll down to "RX" and press "ENTER". Enter the RX frequency using keypad and press "ENTER".

○ Scroll down to "RX SQMD" and press "ENTER". Select either NOISE, DCS, CTCSS, or NONE.

Note: "NOISE" uses Squelch level to open RX, "DCS" use DCS code to open RX, "CTCSS" uses CTCSS to open RX, and "None" opens RX squelch at all times.

○ Scroll down to "TX" and press "ENTER". Enter the TX frequency using keypad and press "ENTER".

○ Scroll down to "TX SQMD" and press "ENTER". Select either DCS, CTCSS, or NONE.

Note: "DCS" sends DCS code on TX carrier, "CTCSS" send CTCSS tone on TX carrier, and "None" sends no tones.

○ Scroll down to "LO PWR" and press "ENTER". Select either "0.1", "0.5", "1.0", "2.0" or "5.0" and press the "ENTER" key.

○ Scroll down to "HI PWR" and press "ENTER". Select either "0.1", "0.5", "1.0", "2.0" or "5.0" and press the "ENTER" key.

If screen reads "SAVE CHANNEL", select "YES". If not, Channel information was stored and you can select another Channel and continue programming or press "ESC" a few times to reach main screen.

NIICD Racal Radios ONLY.

RACAL SETTINGS AND OPTIONS

ADD/REMOVING A CH FROM SCAN LIST

1. Select a Channel to Add to Scan List with the channel select knob.

2. **To Add**, briefly press & release the "◇" key, when released a box "□" will enclose the "C" in the display.

3. **To Remove**, briefly press & release the "O" key. The box "□" will be removed from the "C" in the display.

ADD PRIORITY SCAN CHANNEL

1. Press the "ENTER" key for bring up the Main Menu, and select "PROGRM".

2. Scroll down to "SCAN" and press the "ENTER" key.

3. Scroll down to "PI" and Press "ENTER". Select channel by using CH Select Knob and press "ENT".

4. Press "ESC" key a few times to return to main screen.

Note: To Enable Scan, top toggle switch must be in position B.

To Enable Priority Scan, toggle switch must be in position A.

To Disable Scan/Pri Scan, toggle switch must be in position C.

CHANGE ZONES

1. Press the "ENTER" key to bring up the Main Menu Screen.

2. Scroll down to "SELECT" and press the "ENTER" key.

3. Scroll down to "ZONE" and press "ENTER". Scroll to the desired zone and press "ENTER", then press "ESC" a few times to reach the main screen.

DISABLE/ENABLE KEYPAD

1. Press and hold the "□" key while pressing and holding the "ENTER" key.

Display will show "Keys Disabled", "Side Enabled".

2. Repeat the process, display shows "Keys Disabled, Side Disabled"

3. To Enable all, repeat the process on more time.

HI/LOW POWER SELECTION

1. Press the programmed power selection side button to toggle between HI and LOW Power.

Note: Third side button from the top is programmed as the HI/LOW Power Switch.

(See RACAL Help Files for more Detail)



THALES 25 (RACAL) RADIO QUICK PROGRAMMING GUIDE

Version 2012



1. Select a group and channel needed to program.

2. Program Access

Press the "ENTER" key to bring up the Main Menu Screen.

Scroll up/down using the "O" and "◇" keys to select "PROGRM" and press "ENTER" key.

Enter a 6-Digit Password if requested and press "ENTER". (*NIFC Password is "000000"*)

3. Programming a Channel (ANALOG Only)

○ Scroll down to "CHANNEL" and press "ENTER" to start programming the channel parameters.

○ Scroll down to "TAG" and press "ENTER". Change the channel name using keypad and press "ENTER".

○ Scroll down to "MODE" and press "ENTER". Select "ANALOG" and press "ENTER".

○ Scroll down to "B/W" and press "ENTER". Select either "25Khz" or "12.5Khz" and press "ENTER".

Note: 25Khz= Wideband, 12.5Khz= Narrowband

○ Scroll down to "ENCRPT" and press "ENTER". Select "DISABD" and press "ENTER".

○ Scroll down to "RX" and press "ENTER". Enter the RX frequency using keypad and press "ENTER".

○ Scroll down to "RX SQMD" and press "ENTER". Select either NOISE, DCS, CTCSS, or NONE.

Note: "NOISE" uses Squelch level to open RX, "DCS" use DCS code to open RX, "CTCSS" uses CTCSS to open RX, and "None" opens RX squelch at all times.

○ Scroll down to "TX" and press "ENTER". Enter the TX frequency using keypad and press "ENTER".

○ Scroll down to "TX SQMD" and press "ENTER". Select either DCS, CTCSS, or NONE.

Note: "DCS" sends DCS code on TX carrier, "CTCSS" send CTCSS tone on TX carrier, and "None" sends no tones.

○ Scroll down to "LO PWR" and press "ENTER". Select either "0.1", "0.5", "1.0", "2.0" or "5.0" and press the "ENTER" key.

○ Scroll down to "HI PWR" and press "ENTER". Select either "0.1", "0.5", "1.0", "2.0" or "5.0" and press the "ENTER" key.

If screen reads "SAVE CHANNEL", select "YES". If not, Channel information was stored and you can select another Channel and continue programming or press "ESC" a few times to reach main screen.

NIICD Racal Radios ONLY.

RACAL SETTINGS AND OPTIONS

ADD/REMOVING A CH FROM SCAN LIST

1. Select a Channel to Add to Scan List with the channel select knob.

2. **To Add**, briefly press & release the "◇" key, when released a box "□" will enclose the "C" in the display.

3. **To Remove**, briefly press & release the "O" key. The box "□" will be removed from the "C" in the display.

ADD PRIORITY SCAN CHANNEL

1. Press the "ENTER" key for bring up the Main Menu, and select "PROGRM".

2. Scroll down to "SCAN" and press the "ENTER" key.

3. Scroll down to "PI" and Press "ENTER". Select channel by using CH Select Knob and press "ENT".

4. Press "ESC" key a few times to return to main screen.

Note: To Enable Scan, top toggle switch must be in position B.

To Enable Priority Scan, toggle switch must be in position A.

To Disable Scan/Pri Scan, toggle switch must be in position C.

CHANGE ZONES

1. Press the "ENTER" key to bring up the Main Menu Screen.

2. Scroll down to "SELECT" and press the "ENTER" key.

3. Scroll down to "ZONE" and press "ENTER". Scroll to the desired zone and press "ENTER", then press "ESC" a few times to reach the main screen.

DISABLE/ENABLE KEYPAD

1. Press and hold the "□" key while pressing and holding the "ENTER" key.

Display will show "Keys Disabled", "Side Enabled".

2. Repeat the process, display shows "Keys Disabled, Side Disabled"

3. To Enable all, repeat the process on more time.

HI/LOW POWER SELECTION

1. Press the programmed power selection side button to toggle between HI and LOW Power.

Note: Third side button from the top is programmed as the HI/LOW Power Switch.

(See RACAL Help Files for more Detail)