TDFM-136/A Basic Programming Instructions

Software Versions 2.X.X & 3.X.X



Basic Programming Functions



	- Chiese (data)	NICA
1.	Change To A Previously Programmed Channel:	
	A. Press 4 or 6 .	
	<u>Or</u>	
	A. Press $\begin{bmatrix} 1 \\ CHAN \end{bmatrix}$.	
	B. Press three digit preset channel number, such as $PROG_{MODE} \xrightarrow{3} \xrightarrow{4}$ for channel 34.	
	C. Press ENTER.	
2.	Load New Frequency:	
4.	A. Set MN/GD switch up for Main (MN) programming and down for Guard (GD) programming	g.
	B. Press $\begin{bmatrix} 7 \\ FREQ \end{bmatrix}$.	,
	C. Push keys corresponding to desired receive frequency (Rx) (omitting the 1) and press $\frac{\#}{[NTER]}$	
	D. Push keys corresponding to desired transmit frequency (Tx) (omitting the 1) and press $\begin{bmatrix} \# \\ E \end{bmatrix}$	IR
3.	Load Tone:	
	A. Set MN/GD switch up for Main (MN) programming and down for Guard (GD) programmin	g.
	B. Press 9 sol.	5
	C. To enter a receive tone (Rt), follow the below instructions. Otherwise press $\begin{bmatrix} \# \\ ENTER \end{bmatrix}$.	
	1) Press 9 solution to toggle between receive no tone (Rx) and receive CTCSS tone (Rt) and pre	
	2) If " Rt " was selected, press the 2 and 4 keys scroll through CTCSS tones and press	SS ENTER
	D. To enter a transmit tone (Tt), follow the below instructions. Otherwise press $\begin{bmatrix} \# \\ ENTER \end{bmatrix}$.	
	1) Press $\begin{bmatrix} 9\\ SQL \end{bmatrix}$ to toggle between transmit no tone (Tx) and transmit CTCSS tone (Tt) and p	$\operatorname{ress}\left(\overset{\#}{\operatorname{ENTER}}\right)$
	2) Press 2 and 8 keys scroll through CTCSS tones and press $\frac{\#}{\text{ENTER}}$.	
4	Change Bandwidth.	
4.	A. Set MN/GD switch up for Main (MN) programming and down for Guard (GD) programming	g.
	B. Press $\begin{bmatrix} 3 \\ MODE \end{bmatrix}$ for " n " narrowband, " w " wideband, or " D " P25 digital. Default is " n " for all fre	quencies.
	C. Press ENTER.	
5.	Change Display Brightness:	
	A. Adjust display brightness with (brighter) and (dimmer) while on level 1.	

TDFM-136/A Basic Programming Instructions





- 6. Load A New Channel Into Memory:
 - A. Set MN/GD switch up for Main (MN) programming and down for Guard (GD) programming.
 - B. Press $\begin{bmatrix} 0 \\ PROG \end{bmatrix}$ then $\begin{bmatrix} 1 \\ CHAN \end{bmatrix}$.
 - C. Enter a three digit **channel assignment**, such as $\begin{bmatrix} 0 & 5 & 7 \\ PROG & SCAN & FREQ \end{bmatrix}$ for channel 57, then press $\begin{bmatrix} \# \\ ENTER \end{bmatrix}$.
 - D. Press ENTER. This skips the SCAN options which are disabled in NIICD radios.
 - E. Change alpha/numeric display.
 - Press MODE to toggle between upper case (AZ), lower case (az), numbers (09), and special symbols (/ [blank]) as indicated in lower right corner of display window.
 - 2) Press 2 and 4 keys to scroll through alpha/numeric selections.
 - 3) Press 4 and 6 keys to move curser left or right.

4) When completed with entire alpha/numeric display entry, press \mathbb{E}^{n}

- F. Press $\underbrace{3}_{\text{MODE}}$ to toggle between **bandwidth** of "**n**", "**w**", or "**D**" and press $\underbrace{\#}_{\text{ENTER}}$. Default is "**n**".
- G. Enter receive frequency (**R**x) (omitting the 1) and press $\begin{bmatrix} n^{+}_{\text{ENTER}} \end{bmatrix}$
- H. Enter **transmit frequency** (**Tx**) (omitting the 1) and press $\begin{bmatrix} n^{T} \\ E \end{bmatrix}$.
- I. To enter a **receive tone** (**Rt**), follow the below instructions. Otherwise press $\frac{\pi}{ENTER}$.
 - 1) Press $\begin{bmatrix} 9 \\ SQL \end{bmatrix}$ to toggle between receive no tone (**Rx**) and receive CTCSS tone (**Rt**) and press $\begin{bmatrix} \# \\ ENTER \end{bmatrix}$.
 - 2) If "**Rt**" was selected, press the 2 and 4 keys scroll through CTCSS tones and press 4
- J. To enter a **transmit tone (Tt)**, follow the below instructions. Otherwise press $\begin{bmatrix} \# \\ ENTER \end{bmatrix}$.
 - 1) Press $\begin{bmatrix} 9 \\ \text{SQL} \end{bmatrix}$ to toggle between transmit no tone (**Tx**) and transmit CTCSS tone (**Tt**) and press $\begin{bmatrix} \# \\ \text{ENTER} \end{bmatrix}$.
 - 2) Press 2 and 4 keys scroll through CTCSS tones and press 4 ENTER.
- **7. General Information:** A. Pressing $\begin{bmatrix} 0 \\ PROG \end{bmatrix}$ moves you up a level and $\begin{bmatrix} * \\ ESC \end{bmatrix}$ moves you down.
- B. After **5** seconds the radio reverts to level 1 (level 1 has no "1" displayed) if no user action is taken.
- C. The radio's level is displayed on the bottom line by "GD1" display (i.e. GD12 & GD13).
- D. Tones are assigned by channel. Do not use a tone on a receive frequency unless it's operationally required.
- E. Set guard (Air Guard) to 168.6250 MHz with a TX tone of 110.9 Hz.
- F. There are 230 possible main pre-set channels.
- G. Some *NIICD radio features are disabled* and the radio will display "Command Disabled" when access is attempted. Disabled features are seldom used during normal radio operation.
- H. Press $\underbrace{\mathsf{Enter}}_{\mathsf{Enter}}$ to toggle between "Home" and current memory channel (V3.X.X only).
- I. Press to toggle "Talk Around" on duplex channels (V3.X.X software only).
- J. Visit the NIICD website for additional information and P25 use at:

http://www.nifc.gov/NIICD/documents.html

TDFM-136/A Basic Programming Instructions